

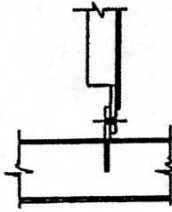


How Do They Connect?


Haunch Connections

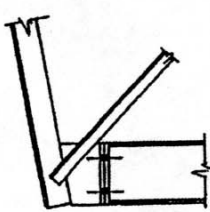


MODELS: 10000
8000-7000-5000
3000-1000

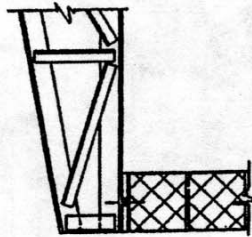


MODEL: 9000

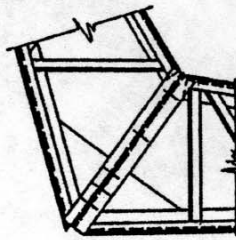

MODEL: 4000


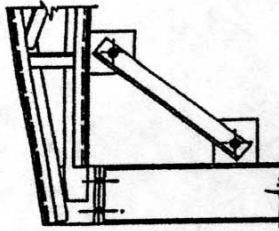


MODEL: 6000

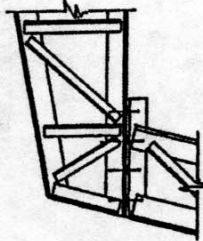


MODEL: 2000



Haunch & Lean-to Connection - End Post Connection

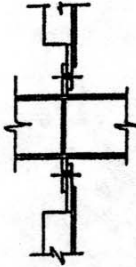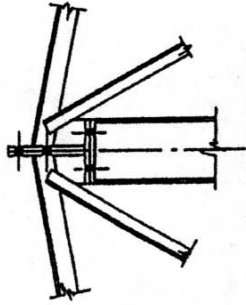


MODEL: 10000

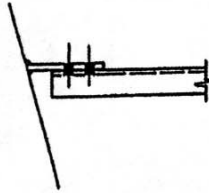


Ridge/Peak Connection

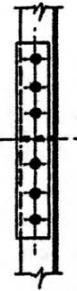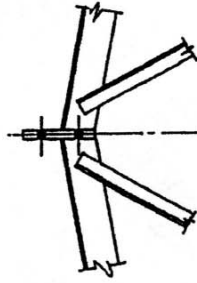

MODELS: 9000
8000-7000-6000
3000-2000

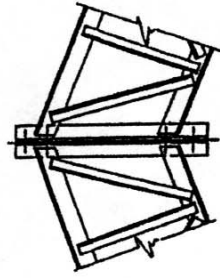


MODEL: 5000
(On single angle
trusses only)

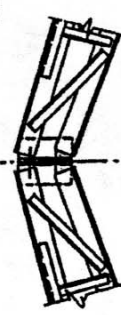


MODEL: 4000

Endpost Connection


Lean-To Connections

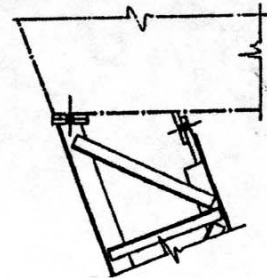

MODEL: 5000

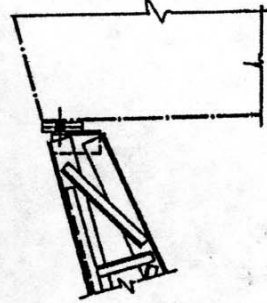


MODEL: 4000

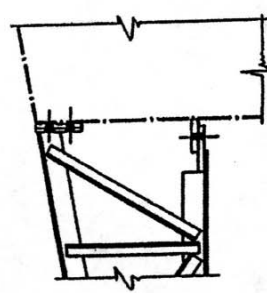

MODEL: 8000-7000
6000

ENDPOST @ EXPANDABLE FRAME

Overhang Connection

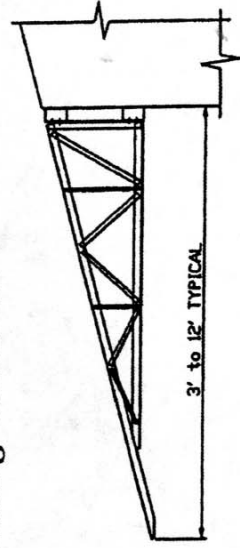

3' to 12' TYPICAL

ENDPOST @ NON-EXPANDABLE FRAME

TOP CHORD EXTENSION

TYPICAL "CANOPY OVERHANG"