
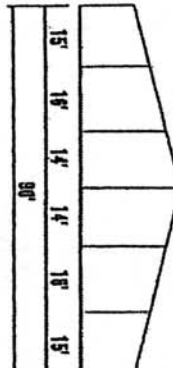
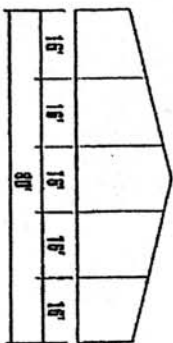
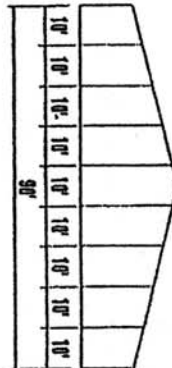
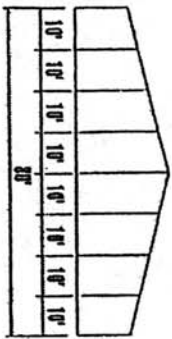
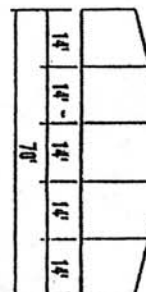
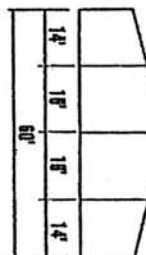
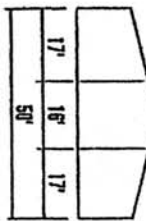
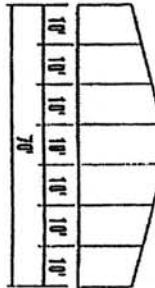
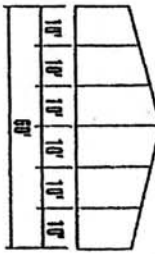
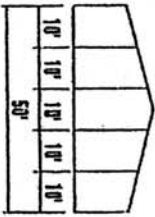
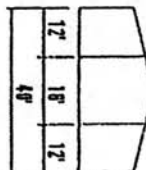
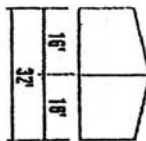


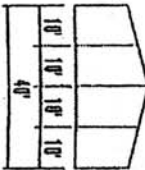
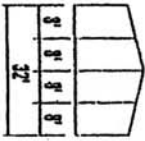



What Are The Typical End Post Spacings?

WOOD NON-EXPANDABLE LOAD BEARING WOOD ENDPOST PLACEMENT WITH WOOD GIRTS

STEEL NON-EXPANDABLE LOAD BEARING STEEL ENDPOST PLACEMENT WITH STEEL OR WOOD GIRTS



OR STEEL FULL FRAME WITH NON LOAD BEARING WALL ENDPOST PLACEMENT WITH WOOD GIRTS

STEEL FULL FRAME WITH NON LOAD BEARING STEEL ENDPOST PLACEMENT WITH STEEL GIRTS

